



Fluid Power Specialist



## LENZ CP-1281 Gasket Installation Instructions

The proper installation of this filter element requires the use of the correct sealing gasket.


Use the (5/16") square cut sealing gasket Lenz part number # (LZ-156610 our CP-1281-gasket) supplied with the element for Lenz filter heads.

Lenz also offers a 3/16" diameter sealing gasket for other manufacturers filter head castings Lenz part number # (LZ-15415) for filter heads manufactured with narrower groove in the filter head.

The correct gasket will fit snugly in the appropriate casting groove and provide a Doubleseam-Style sealing gasket.

If your casting has no groove on the filter casting use the Lenz "L" shaped gasket # (LZ-15658).

Lenz gaskets LZ-15415 and LZ-15658 are not supplied with the element but can be ordered.

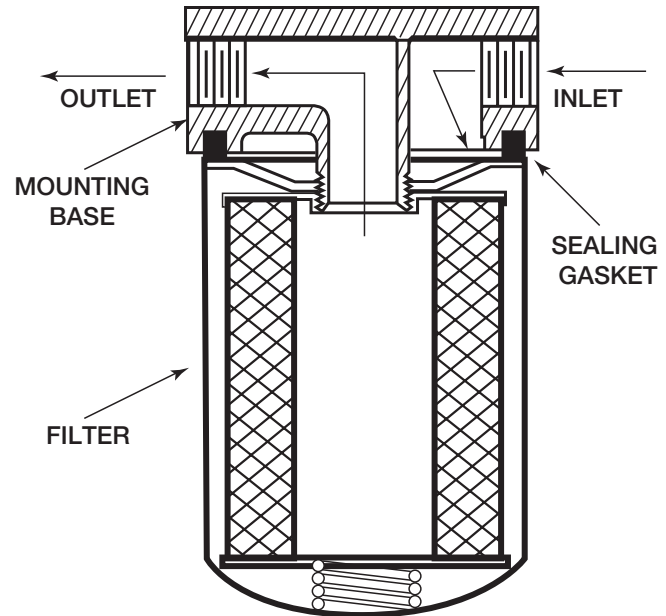

### INSTALLATION PROCEDURE

1. Remove the old filter element and gasket. Thoroughly clean the filter head casting and groove. Make sure they are free from debris and un-damaged.
2. For filter head castings with a groove select the proper sealing gasket. Apply clean motor oil to the gasket and install it in the groove. Be sure the gasket is fully seated in the groove.
3. On filter head castings without groove, the "L" shaped gasket is placed on the top edge of the filter element prior to installation.
4. Install the new filter element on the filter head casting and tighten per the installation instructions printed on Lenz filter element.
5. Proper gasket installation and installation procedures are necessary to prevent fluid leakage and possible component damage.

